

**Part Number: PT276-18130**

**Kit Contents**

Item #	Quantity Reqd.	Description
1	4	Wheel Lock
2	1	Key
3	1	Instruction Card
4	1	ID Card
5	1	Order Form / Envelope

**Additional Items Required For Installation**

Item #	Quantity Reqd.	Description

**Conflicts**

--

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
None	
<b>Special Tools</b>	<b>Notes</b>
None	
<b>Installation Tools</b>	<b>Notes</b>
Socket	19 mm, Deep Well
Torque Wrench	Dial type or Digital (lbf-ft.)
Pliers	With Side Cutter
<b>Special Chemicals</b>	<b>Notes</b>
None	

**General Applicability**

Alloy Wheel
-------------

**Recommended Sequence of Application**

Item #	Accessory

\*Mandatory

**NOTE:** Part number of this accessory may not be the same as the part number shown.

**Vehicle Service Parts** (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

**Legend**

	<b>STOP:</b> Damage to the vehicle may occur. Do not proceed until process has been complied with.
	<b>OPERATOR SAFETY:</b> Use caution to avoid risk of injury.
	<b>CAUTION:</b> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	<b>TOOLS &amp; EQUIPMENT:</b> Used in Figures calls out the specific tools and equipment recommended for this process.
	<b>REVISION MARK:</b> This mark highlights a change in installation with respect to previous issue.
	<b>SAFETY TORQUE:</b> This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Scion dealer for a copy of this document.

### 1. Remove One Lug Nut.



- (a) Carefully remove one lug nut from each wheel, avoid damage to wheel.

### 2. Install Wheel Lock.

- (a) By hand, install a Wheel Lock on each wheel.
- (b) Take the key supplied in the wheel lock set. Place it on top of the wheel lock and turn until the pattern engages.



- (c) Place the socket on top of the key. Using a torque wrench while applying pressure on the key tighten the wheel locks to 120 N-m (89 lbf-ft). **DO NOT** use an impact wrench.

### 3. Key Storage

- (a) Place the wheel lock key in the tool storage tray located on the right side of the rear cargo area (Fig. 3-1).

### 4. Completing the Installation



- (a) Place wheel lock information packet in glove box.

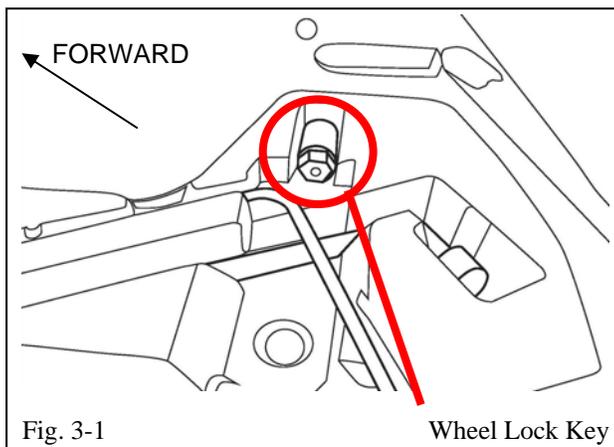


Fig. 3-1

Wheel Lock Key

Checklist - these points **MUST** be checked to ensure a quality installation.

Check: \_\_\_\_\_

Look For: \_\_\_\_\_

Accessory Function Checks

Correct part number has been installed.

Verify part number on package

Wheel lock tightness.

|| Wheel locks have been installed at a torque of 120 N-m (89 lbf-ft.). Check torque during installation.

Wheel for damage.

No damage to wheel.

Key Placement

Key secure in the tool tray