

PTR43-00084

(See 'General Applicability' for Model Listing)

Preparation

Part Number: PTR43-00084

Kit Contents

Item #	Quantity Req'd.	Description
1	1	Performance Air Filter
2	1	Warning Label

Additional Items Required For Installation

Item #	Quantity Req'd.	Description
1		

Conflicts

PPO Code	Description
None	N/A

Recommended Tools

Safety Tools	
Safety Glasses	or Goggles
Special Tools	
Vehicle Protection	Blankets
Installation Tools	
None	
Special Chemicals	
Toyota Approved Cleaner	Prep Solvent 70 or similar

General Applicability

RAV4 - 2.4L I4, 2.7L I4, 3.5L V6 → 2006-
Avalon - 3.5L V6 → 2005-
Camry - 3.5L V6 → 2006-
Scion xB - 2.4L I4 → 2008-
Scion tC - 2.5L I4 → 2011-
Corolla - 2.4L I4 → 2009-
Matrix - 2.4L I4 → 2009-
Venza - 3.5L V6 → 2009-

Recommended Sequence of Application

Item #	PPO Code	Accessory
	None	N/A

*Mandatory

Legend

STOP **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

+ **OPERATOR SAFETY:** Use caution to avoid risk of injury.

! **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

Wrench **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

|| **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

S **SAFETY TORQUE:** This mark indicates that torque is related to safety.



A. Check Box Contents

1. Check box for contents and/or damage.

B. Vehicle Preparation



1. Use blankets to protect the front grille and driver-side front fender area.

C. Removal Procedure: OE Air Filter – (2008 Scion xB Shown)

1. Remove the factory air filter.
 - i. Unlatch three air filter housing clips. (Fig. C1)

NOTE: 06-07 RAV4 has two clips.

- ii. Lift air filter housing lid up to expose factory air filter. (Fig. C2)



- iii. Remove factory air filter from air filter housing and discard filter. (Fig. C2)

D. Installation Procedure: TRD Air Filter – (2008 Scion xB Shown)

1. Install the TRD air filter.





- i. Insert the TRD air filter into the air filter housing with the deep side of the filter down in the housing. (Fig D1)



- ii. Move air filter housing lid into place.
 - iii. Re-latch all three air filter housing clips. (Fig. C1)

NOTE: Two clips only on 06-07 RAV4.

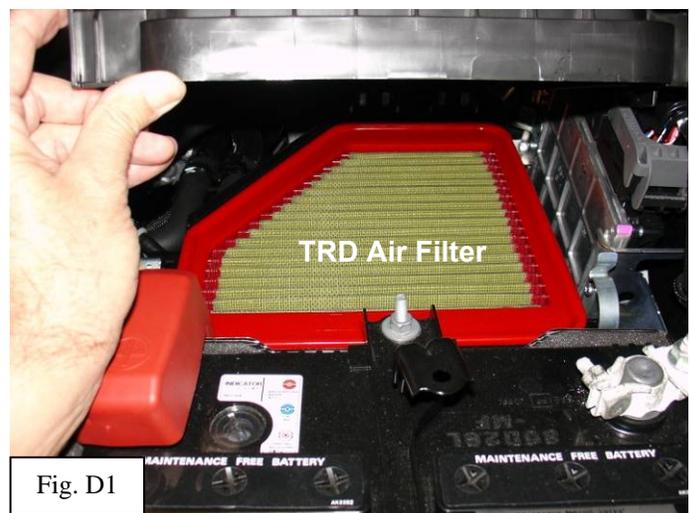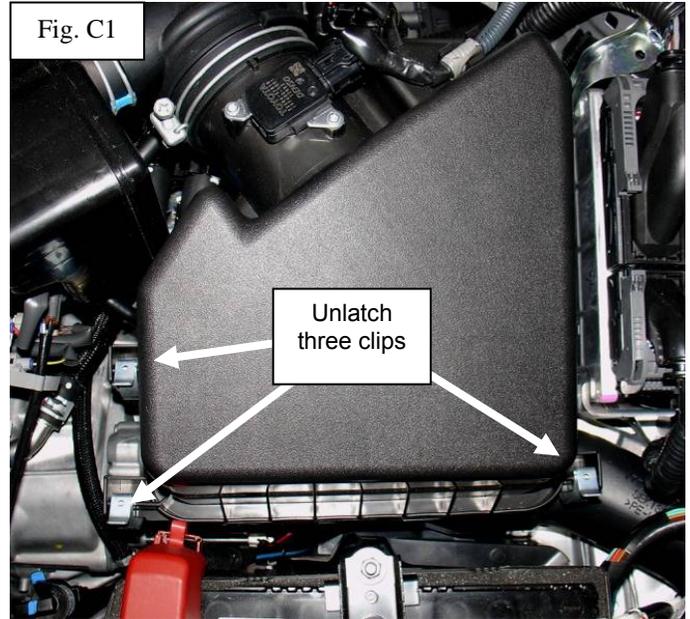

Procedure

- ➔ 2. Use a lint free cloth and a Toyota approved cleaner such as 3M Prep Solvent 70 or similar to clean the air filter housing lid adjacent to the intake duct. (Fig. D2)

For cleaning the vehicle application specific area, see Figures D2 through D6.

- ➔ 3. Use a lint free cloth and water to clean the same area as in Step 2 above. (Figs. D2 – D6)

- ⚠ 4. Apply TRD air filter warning label to area pre-cleaned from the steps above.

Figure D3:

Scion xB: 2008 →

Corolla: 2009 →

Matrix: 2009 →

Scion tC: 2011

Figure D4:

Camry V6: 2007 →

Avalon: 2005 →

Venza: 2009 →

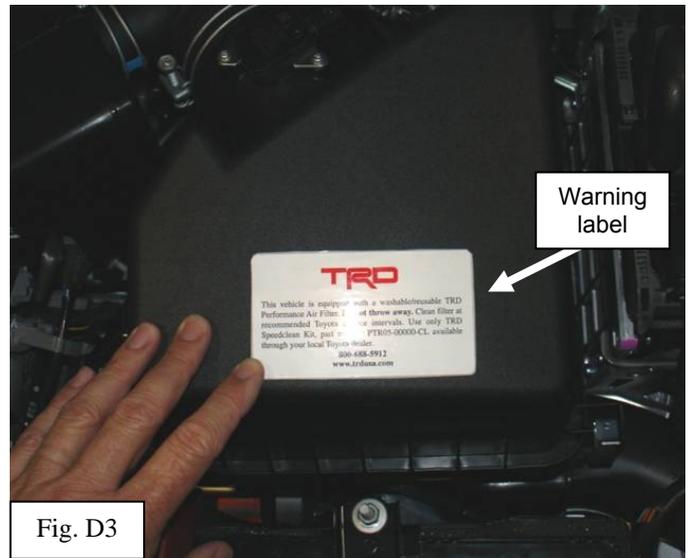
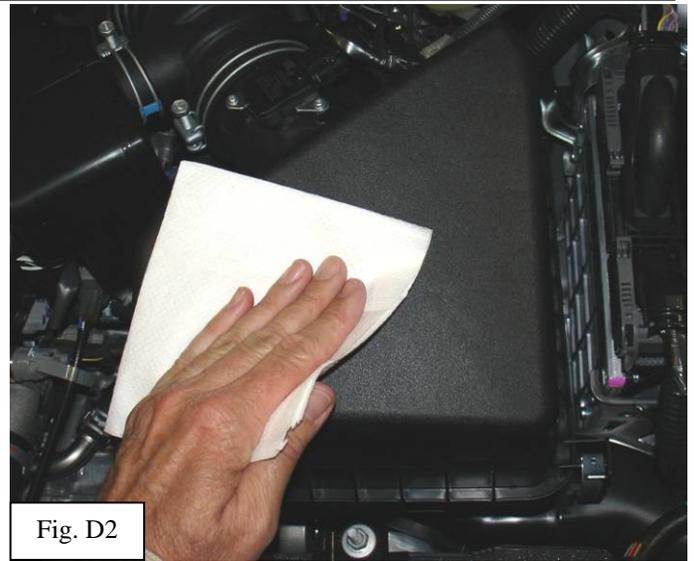


Figure D5:

RAV4 (4 cylinder): 2006 →

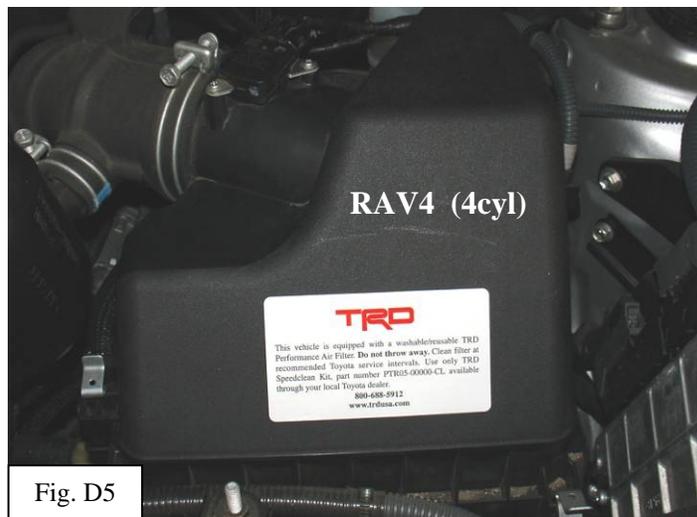


Figure D6:

RAV4 (V6): 2006 →



E. Post Installation

1. Remove blankets from front fender and grille area.



Section III – Functional Verifications

Check: _____



Air Filter Housing Lid

Look For: _____

- Re-usable air filter warning label
- Air leaks/gaps

Vehicle Appearance Check

- After accessory installation and removal of protective cover(s), perform a visual inspection.

Ensure no damage (including scuffs and scratches) was caused during the installation process.
(For PPO installations, refer to TMS Accessory Quality Shipping Standard.)