

Preparation

Part Number: PT347-35050

Kit Contents

| Item # | Quantity Reqd. | Description |
|--------|----------------|---------------------------|
| 1 | 1 | Convenience Net |
| 2 | 2 | Installation Instructions |
| | | |

Hardware Bag Contents

| Item # | Quantity Reqd. | Description |
|--------|----------------|-------------|
| | | |

Additional Items Required For Installation

| Item # | Quantity Reqd. | Description |
|--------|----------------|-------------|
| | | |

Conflicts

| |
|--|
| |
|--|

Recommended Tools

| | |
|--|--------------|
| Personal & Vehicle Protection | Notes |
| None | |
| | |
| Special Tools | Notes |
| None | |
| | |
| Installation Tools | Notes |
| None | |
| | |
| Special Chemicals | Notes |
| None | |
| | |

General Applicability

| |
|--|
| |
|--|

Recommended Sequence of Application

| Item # | Accessory |
|--------|-----------|
| | |






*Mandatory

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

| Item # | Quantity Reqd. | Description |
|--------|----------------|-------------|
| 1 | | |
| | | |

Legend

| | |
|---|--|
|  | STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with. |
|  | OPERATOR SAFETY: Use caution to avoid risk of injury. |
|  | CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation. |
|  | TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process. |
|  | REVISION MARK: This mark highlights a change in installation with respect to previous issue. |

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

1. First Main Step.

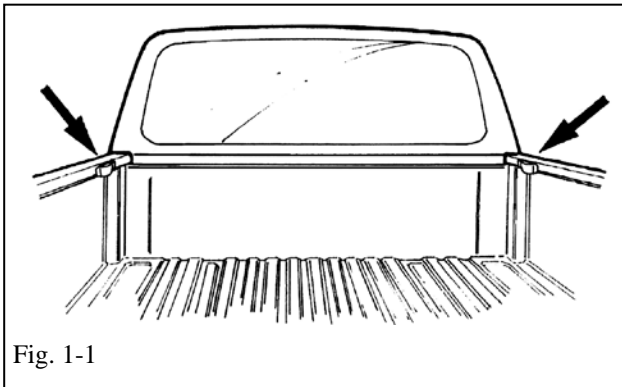

(a) Locate anchor points in the truck bed (Fig. 1-1).





(b) Insert bungee loop from the underside of the D-ring cleat and attach to the outside of the cleat handle as shown (Fig. 1-2).



(c) Repeat Step 1 (b) for other side.



(d) Confirm completed assembly, making sure the net handle faces toward the rear of the vehicle (Fig. 1-3).

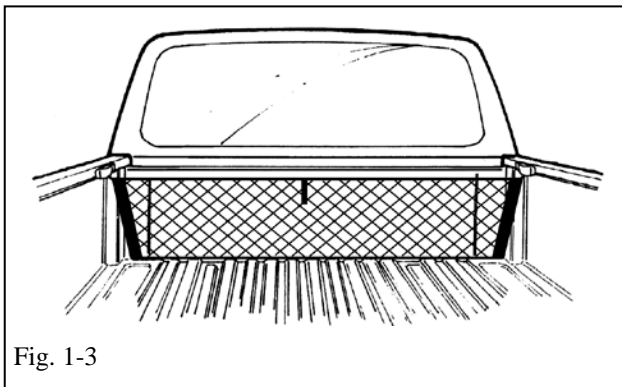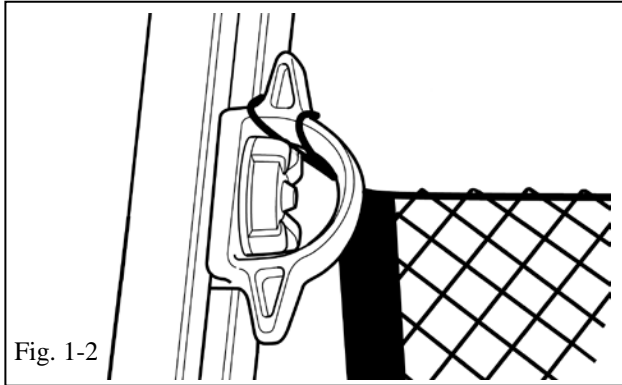

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- Confirm that the net is attached properly to the anchor points in the vehicle.

Make sure loops have been inserted from the underside of the cleat and attached to the outside of the cleat handle, and the net handle faces the rear of the vehicle.