

Part Number: PTR43-00085

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Air Filter Panel
2	1	Warning Label
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1	As needed	Dealer and TLS approved lint free cloth
2		
3		

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
Vehicle protection	Blanket and Lint Free Cloth
Special Tools	Notes
Installation Tools	Notes
Special Chemicals	Notes
Dealer and TLS approved cleaner	

General Applicability

All FR-S

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.
	SAFETY TORQUE: This mark indicates that torque is related to safety.


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

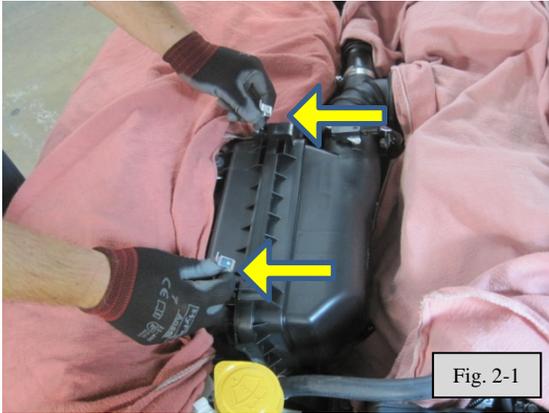


1. Check Kit Contents.

- (a) Check filter panel for damage to wire mesh.
- (b) Ensure warning sticker is present, see Fig 5-1.

2. Vehicle Protection

-  (a) Place vehicle protection over front bumper.
-  (b) Place protective rags as shown (Fig. 2-1).
- (c) Unlatch the (2) filter lid clips (Fig. 2-1).

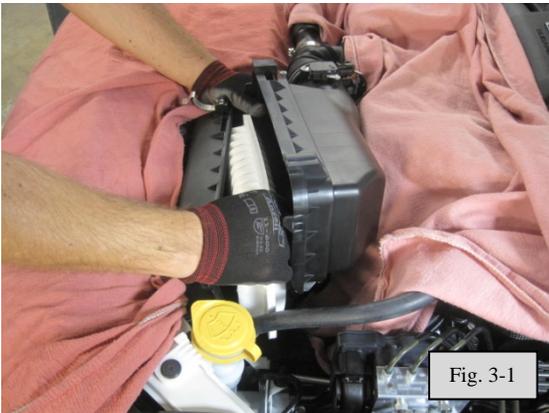

3. Remove OE Air Filter

- (a) Remove OE Filter and discard (Fig. 3-1)

4. Install TRD Air Filter

- (a) Place TRD Air Filter in filter housing as shown (Fig 4-1). Ensure notches (Fig 4-2) inserted to bottom of filter housing.



- (b) Replace filter housing lid (Fig 4-1).



- (1) Be careful to not damage the wire mesh of the air filter.



- (c) Engage the (2) filter lid clips (Fig 4-1).

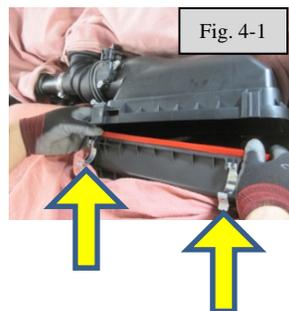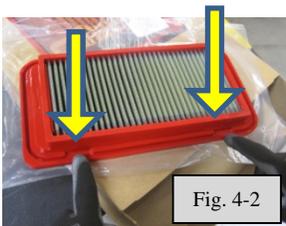



5. Install Warning Label

- (a) Clean the filter housing lid with a lint free cloth and TLS approved cleaner.
- (b) Wipe the filter housing lid with a water dampened lint free cloth and dry with a dry lint free cloth.
- (c) Place the Warning Label on the filter housing lid as shown. Center with the ribs on the filter housing (Fig. 5-1).
- (d) Remove vehicle protection.

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
<p><u>Accessory Function Checks</u></p> <p><input type="checkbox"/></p> <p> <input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	
<p><u>Vehicle Function Checks</u></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	
<p><u>Vehicle Appearance Check</u></p> <p><input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.</p>	<p>Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)</p>