

**Part Number:**

**PU550-48110-01 Highlander**

**PU550-4811H-01 Highlander Hybrid**

**NOTE:** Part number of this accessory may not be the same as the part number shown.

**Kit Contents**

Item #	Quantity Req'd.	Description
1	1	CARGO TRAY
2		
3		

**Hardware Bag Contents**

Item #	Quantity Req'd.	Description
1		
2		
3		
4		
5		
6		

**Additional Items Required For Installation**

Item #	Quantity Req'd.	Description

**Conflicts**

--

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
NONE	
<b>Special Tools</b>	<b>Notes</b>
NONE	
<b>Installation Tools</b>	<b>Notes</b>
NONE	
<b>Special Chemicals</b>	<b>Notes</b>
NONE	

--

Vehicle/Trim Color	Accessory Color	BLACK																	

**General Applicability**

--

**Recommended Sequence of Application**






Item #	Accessory
1	CARGO TRAY
2	
3	


\*Mandatory

**Vehicle Service Parts** (may be required for reassembly)


Item #	Quantity Req'd.	Description
1		
2		
3		

**Legend**

	<b>STOP:</b> Damage to the vehicle may occur. Do not proceed until process has been complied with.
	<b>OPERATOR SAFETY:</b> Use caution to avoid risk of injury.
	<b>CAUTION:</b> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	<b>TOOLS &amp; EQUIPMENT:</b> Used in Figures calls out the specific tools and equipment recommended for this process.
	<b>REVISION MARK:</b> This mark highlights a change in installation with respect to previous issue.

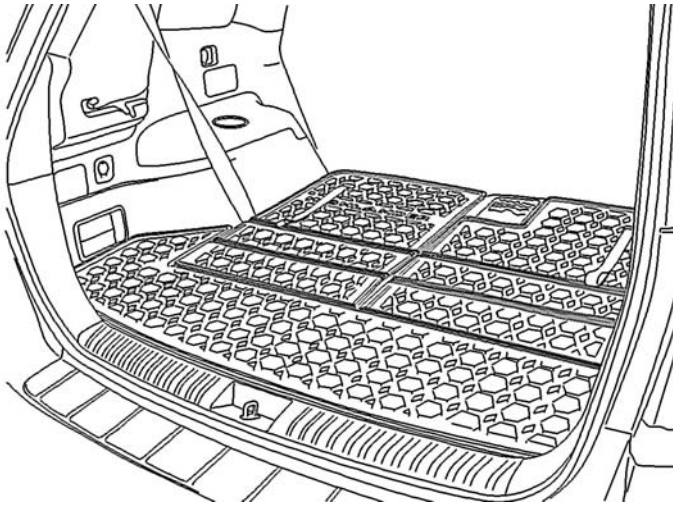

Place cargo tray in trunk area with the logo at the front of the vehicle with rear seats down as shown. Pull rear seat straps through cut-outs in tray. Ensure tray makes full contact with the trunk floor.

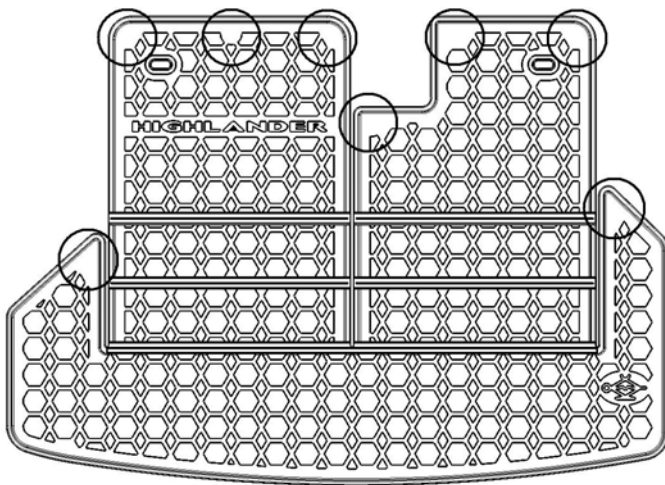

Rub/massage areas of cargo tray shown to ensure proper attachment to seatback before actuating rear seats up.

Due to shipping method, it may take up to 24 hours of warmth (room temperature) to completely form to its intended shape and lie flat

Vehicle Function Checks

- Confirm rear hatch closes completely
- Close hatch and confirm full connection

Notes:

- It is important that the cargo tray is not installed in your vehicle if the cargo area carpet is damp or wet, as mildew may result. Therefore, completely dry the carpet out before installing your cargo tray.
- To maintain the luster and non-stick finish of your cargo tray, clean with a cloth as required using mild soap and water.
- Your cargo tray is chemically resistant to most fluids used in normal vehicle maintenance. Great caution must be used when transporting corrosive chemicals. Should a spill occur, the tray should be carefully removed from the vehicle and washed thoroughly to prevent damage. If contact is made, follow chemical manufacturer's instructions and cautions.