

Part Number: PT949-47160-02

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Combo Hook Dock (CHD)
2	4	CHD Head Rest Strut Inserts
3	1	Universal Tablet Holder
4	1	Owner's Manual

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	4	CHD Headrest Strut Inserts
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	Notes
Clean Cloths	Ensure hands & uniform are clean before entering vehicle
Special Tools	Notes
None	
Installation Tools	Notes
None	
Special Chemicals	Notes
None	

General Applicability

All Toyota vehicles with removable headrests
--

Recommended Sequence of Application


Item #	Accessory
1	
2	
3	


*Mandatory


Vehicle Service Parts (may be required for reassembly)


Item #	Quantity Reqd.	Description
1	1	PT949-47160-AA (UTH)
2	1	PT949-47160-AB (CHD)
3		


Legend


 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.


 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.

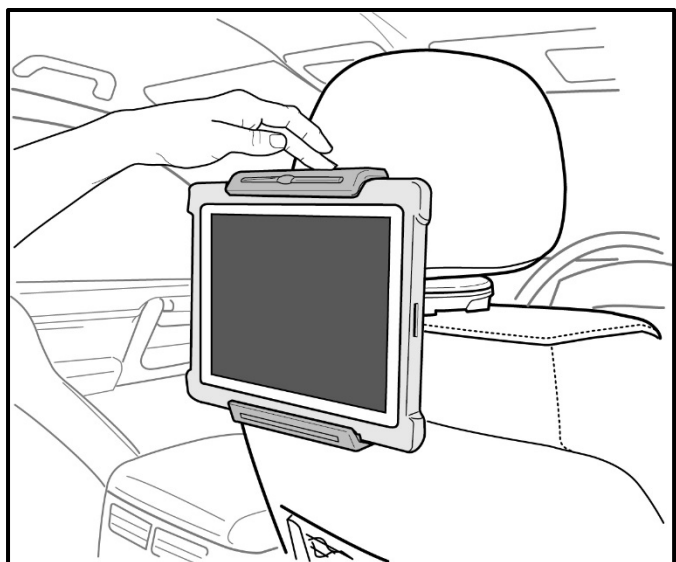

TOYOTA ALL MODELS ALL YEARS UNIVERSAL TABLET HOLDER Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota/Scion/Lexus dealer for a copy of this document.

1. Install the Combo Hook Dock.

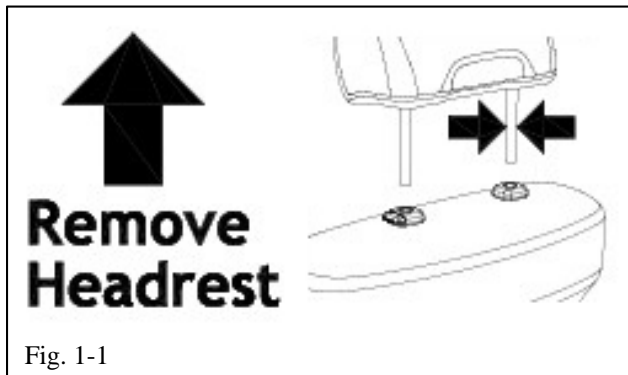


Fig. 1-1

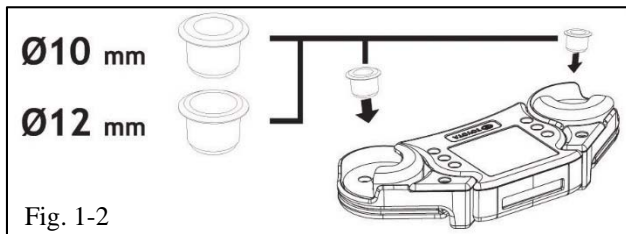


Fig. 1-2

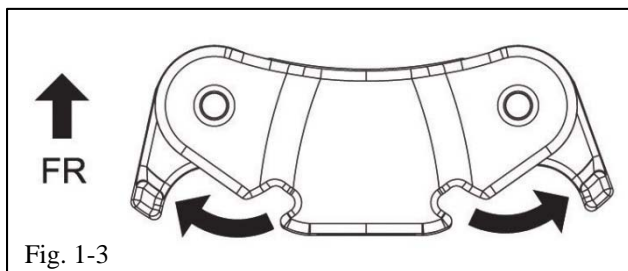


Fig. 1-3



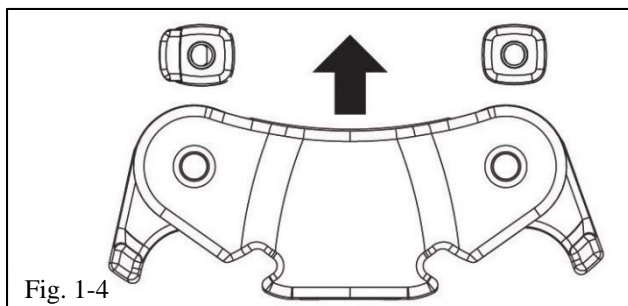


Fig. 1-4

- (a) Remove the front head rest (Fig. 1-1).
- (b) Measure the head rest strut diameter (Fig. 1-1).
- (c) If the head rest strut diameter is less than 14mm, insert the matching 12mm or 10mm inserts on both posts (Fig. 1-2).
- (d) Push the inserts in from underneath until they are flush.
- (e) Sitting in the back seat and looking from the top down, open both arms on the Combo Hook Dock (Fig. 1-3).
- (f) Slide the Combo Hook Dock onto the seat post plastic caps. Push until the holes align when looking down from the top of the seat (Fig. 1-4).

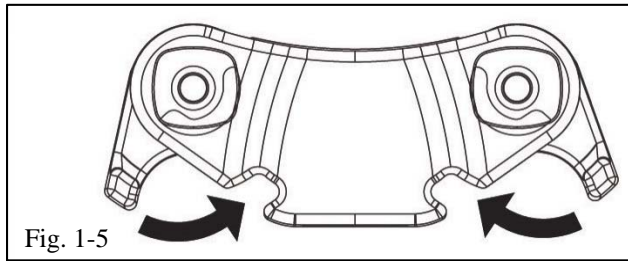

(g) Close the arms (Fig. 1-5).

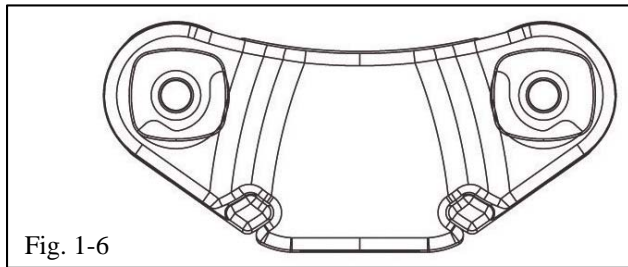


(h) Ensure the hole in the Combo Hook Dock is aligned with the hole in the plastic caps on the top of the seat (Fig. 1-6).




(i) Replace the head rest (Fig. 1-7). It should click when properly fitted.

2. Install/Remove a Tablet.

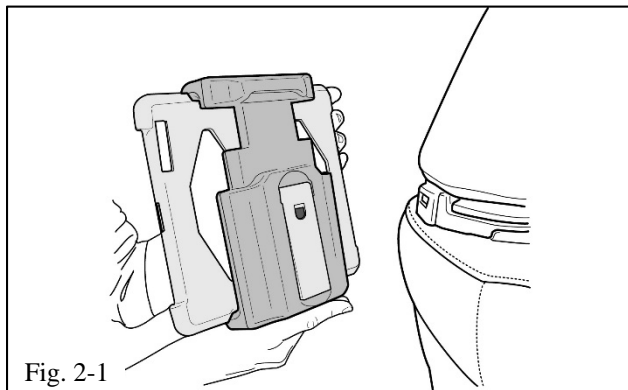

(a) To install the Holder, with or without a tablet mounted, open the arm at the back and insert it into the Combo Hook Dock (Fig. 2-1 & Fig. 2-2).

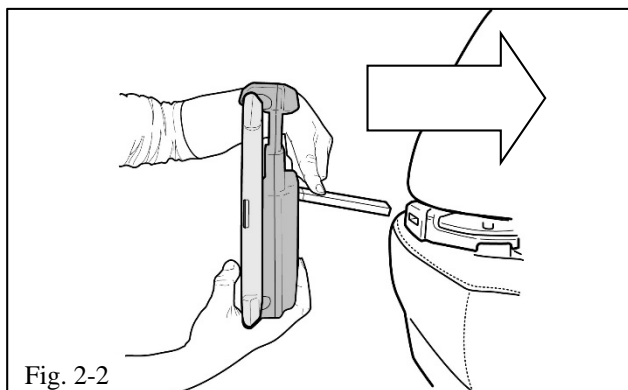

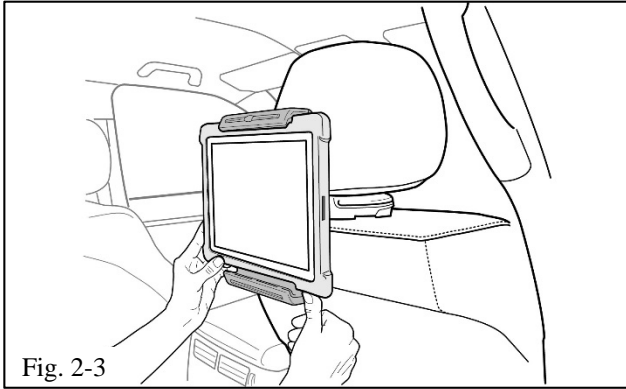


Fig. 2-3

(b) The Holder will look like Fig. 2-3 with a tablet installed or Fig. 2-4 without a tablet installed.




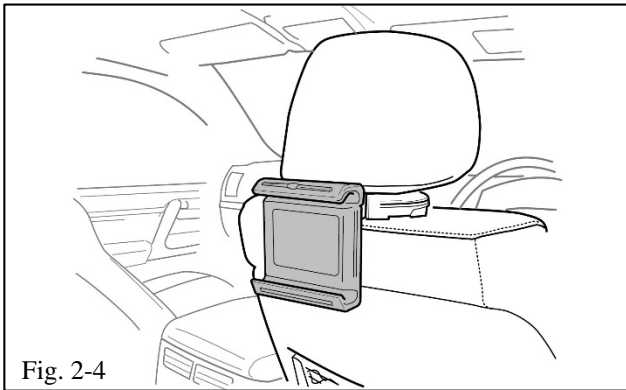


Fig. 2-4

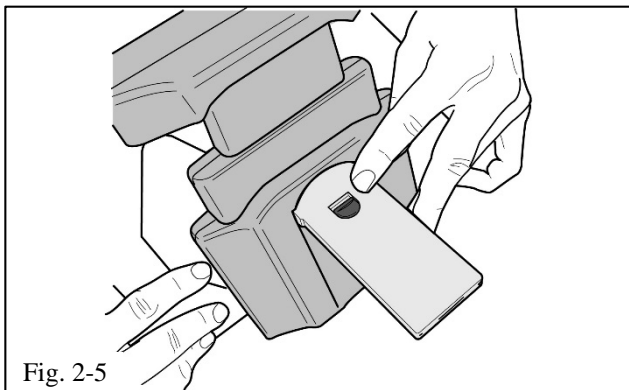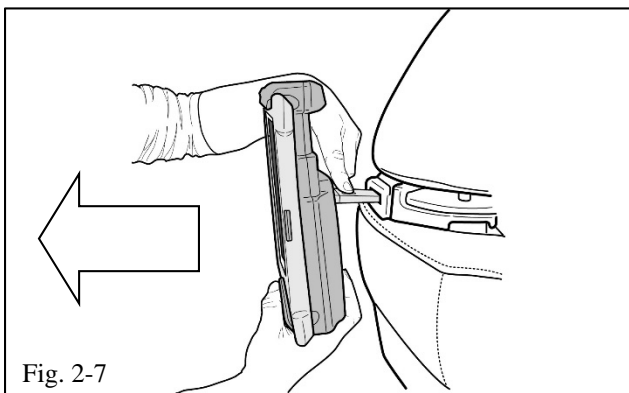

(c) To remove the Holder, press the locking button and pull towards the rear seat (Fig. 2-5, Fig. 2-6 & Fig. 2-7).

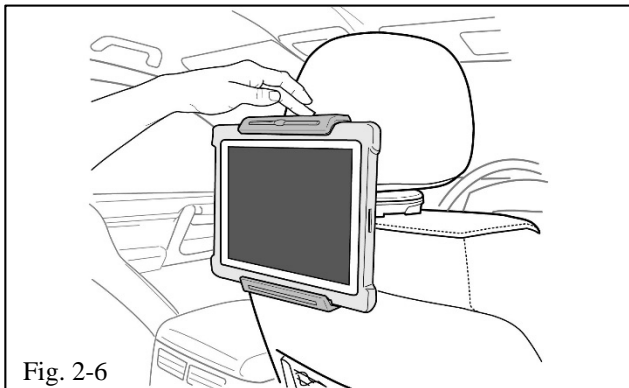

3. Use as a Bag Holder.

(a) The Combo Hook can also be used to hold bags (Fig. 3-1).

TOYOTA ALL MODELS ALL YEARS UNIVERSAL TABLET HOLDER

Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <p><input type="checkbox"/> Locking tab</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Locks the Tablet Holder in position</p>
<p><u>Vehicle Function Checks</u></p> <p><input type="checkbox"/> Head rest</p> <p><input type="checkbox"/></p>	<p>Pull upward & ensure it is locked in position</p>
<p><u>Vehicle Appearance Check</u></p> <p><input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.</p>	<p>Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)</p>